



Customer Support: savclient@axe-environnement.eu

USER MANUAL



How to install batteries ?

Outer Zipper Pocket

Comment installer les piles ?
Poche extérieure à fermeture éclair

Step one, Open the Pocket and take out the Plug

Première étape :
ouvrir la poche et retirer le bouchon.



Step two, Connect to the Battery and put it in the Battery Pocket

Deuxième étape,
Connectez la batterie et placez-la dans la pochette de la batterie.



Heating Controller Contrôleur de Chauffage



Special Feature Description

- In order to prevent accidental opening or closing of the glove switch by touching it during activities, it is designed to be anti-touch and Must be pressed for 3 seconds to open/close it !
- Four battery power indicators. Each time the heating gear is adjusted the battery power indicator will light up and turn off after 5 seconds.

Rechargeable power bank system care.

To prolong the performance of the power bank we recommend you follow these steps:

- Only use the power banks and charger cable provided by AXE ENVIRONNEMENT.
- Fully charge the power bank until all four (4) indicator lights are lit.
- Unplug the charger cable after the power bank is fully charged.
- Power bank should be charged before storage.

Power bank disposal instructions.

- Please dispose of the power banks as per your local municipality regulations.
- Keep our environment safe.



Entretien de la source d'alimentation rechargeable.

Afin de prolonger la durée de vie de la source d'alimentation, nous recommandons de suivre les étapes suivantes :

- Utilisez la source d'alimentation et le câble de recharge USB inclus AXE ENVIRONNEMENT.
- Chargez complètement la source d'alimentation jusqu'à ce que les 4 voyants DEL soient allumés.
- Débranchez le câble de recharge quand la source d'alimentation est complètement chargée.
- La source d'alimentation devrait être chargée avant l'entreposage.

Instructions de mise au rebut de la source d'alimentation.

- Veuillez jeter les sources d'alimentation conformément aux réglementations de votre pays.
- Protégez notre environnement.

Guide d'entretien

Débranchez et retirez la source d'alimentation avant d'effectuer l'entretien. Ne pas tordre le vêtement pour éviter des dommages au câble.

LAVER SÉPARÉMENT À LA MACHINE À L'EAU FROIDE
- CYCLE DÉLICAT - NE PAS UTILISER D'AGENT DE BLANCHIMENT
- SÉCHER À LA MACHINE À BASSE
TEMPÉRATURE CYCLE DÉLICAT - REPASSER À BASSE
TEMPÉRATURE - NE PAS NETTOYER À SEC.



WHAT INCLUDED

- A Pair of heated gloves.
- A Pair of 7.4V 2200MAH Polymer Lithium Rechargeable Batteries.
- 1pc 8.4V dual battery charger.
- 1pc user manual.

HEATING TIME :

- High Level : 100% Heat , 2-2.5 Hours.
- Medium Level : 66% Heat, 3-3.5 Hours.
- Low Level : 33% Heat , 6-6.5 Hours.

HEATING AREA

- Heating elements cover whole back of hand and fingers till finger tips .

WASHING INSTRUCTIONS

- Remove Battery while Cleaning or Storing Gloves.
- Use Mild Detergent to Clean the Only the Spots and Air Dry Lying Flat.
- Hand wash only.
- Do not Machine Dry or Use Bleach.

HOW TO USE

- Charge Up ? Fully charge the batteries with provided charger kit Before using .
- Plug-In ? Carefully connect batteries with power wire located in the pocket.
- Press Power Button Once to On with high heating & Press Again to Adjust Heating Modes.
- It is recommended to recharge the battery at least once every three months to keep it usable (If product is not in use).

HOW TO CHARGE

- Remove Battery from Gloves While Charging.
- Charge your batteries with provided charger kit at room temperature for 3-4 Hours prior to first use.
- Red Light illuminate While Charging.
- Green Light illuminate when Charging is Complete.

ATTENTION

- Always remove the batteries from your gloves when charging .
- For safety, do not drop , short circuit , or operate under high temperature conditions.
- If the device or the battery swells or becomes malformed , please stop using it immediately.

WARRANTY CLAUSES

- Lithium-ion batteries, charger and Gloves cover 1 Year of warranty period from the date of purchase.



www.axe-environnement.eu



www.axe-environnement.eu

WARNING

- Please make sure to charge battery correctly, improper use may cause fire in severe cases!
- Please pay attention to the following when charging:
- Charge the battery with original charger only.
- Forbidden to disassemble, knock, squeeze the battery or throw it into fire. If there is severe swelling, please stop using it
- Forbidden to use in high temperature environment. Forbidden to use the battery after soaking in water.
- Keep away from flammable materials when charging.
- When the battery is fully charged and turns to the green light, please remove the battery in time, and do not charge it when unattended.
- The elderly, children and people with limited mobility should not use it alone.
- If you do not use batteries for a long time, please charge and discharge it once within 3 months.
- Do not use the products during sleeping.
- If one place is very hot during use, it may be a short circuit of the heating wire. Please stop using it immediately.
- Do not use this product if your feet or hands have bacterial infection and other diseases.

BATTERY TOOL USE AND CARE:

- Do not place the battery on inflammable objects such as beds, sofas, blankets, etc. for a long time, and keep away from inflammable and explosive objects when charging.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use heated gloves, heated socks, and any other heated products only with specifically designated battery packs. Use of any other battery packs may create a risk if injury and fire.
- When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns

After-sales advice:

Dear buyer: Any use or quality problems, please contact us through the Amazon "Contact Seller" channel, which is the most convenient and effective communication channels, or send an e-mail to savclient@axe-environnement.eu mailbox contact!

Information sur la garantie :

Axe-environnement pour une garantie limitée
Deux (2)ans incluant la source d'alimentation, les modules chauffants et la veste/gilet à partir de la date d'achat initiale

Une preuve d'achat datée est requise.

Pendant cette période, nous ne remplacerons ou réparerons que les produits ou composants qui présentent un défaut de fabrication ou de matériau. Cette garantie limitée ne s'étend pas aux dommages résultant d'une mauvaise utilisation, d'une négligence ou d'un abus, d'une usure normale, d'un accident, d'une panne ou d'un aliment qui endommage le produit ou ses composants. / si un défaut survient dans le produit, l'utilisateur doit retourner rapidement le produit à un détaillant autorisé pendant la période de garantie limitée. Si le produit ou tout composant est remplacé ou réparé, le remplacement ou la réparation n'est couvert que pour le reste de la période de garantie limitée d'origine datant de l'achat du produit d'origine.

Le produit doit être retourné au détaillant et la banque d'alimentation doit être incluse.

Contact: Si vous rencontrez des problèmes avec le produit pendant la période de garantie, veuillez nous contacter par e-mail. savclient@axe-environnement.eu

KEEP YOU WARM



AXE ENVIRONNEMENT

www.axe-environnement.eu



AXE ENVIRONNEMENT

www.axe-environnement.eu