



AXE ENVIRONNEMENT HEATED SOCKS

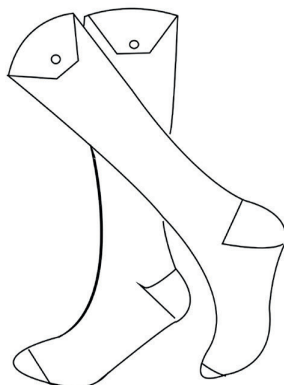

01 Battery Introduction

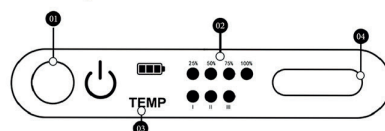

1. Power switch/mode selection.
2. Battery indicator light (it will flash intermittently, with one flash indicating 25% battery, two flashes indicating 50% battery, three flashes indicating 75% battery, and four flashes indicating 100% battery).
3. Heating indicator light, when fully lit, the maximum gear is heated, the one that is lit is the minimum gear is heated, and when fully lit and flashing at the same time, it is the fast heating mode.
4. TYPEC charging port.

02 Introduction of the APP interface



1. Switch symbols
2. Equipment status
3. Quick heating mode button
4. Temperature range adjustment
5. Timing button
6. More setting information

03 How to quickly use the devices?



Step 1:
Download the app. Search for 'WarmU' in the App store and download the 'WarmU' App.



Step 2:
Turn on the Bluetooth function of the phone.

Step 3: Connect the device .



1. Firstly, connect the power cord to the battery.
2. Open the app, click on the power switch symbol, and the app will automatically match and connect with the device. When the following icon turns red, it indicates that the App has been connected to the device, the device has been turned on, and they are heating.



Step 4: Select your heating mode on the APP

(1) Automatic heating mode. After connecting the device to the APP, it automatically enters to the heating program. Then, the temperature rises to the desired value, adjust the gear down for insulation.



(2) Quick heating mode. Open the fast heating mode button in the upper right corner of the APP, the device will enter to fast heating for 1 minute, and then automatically enter insulation mode.


Precautions:

1. You don't need to use the maximum heating range all the time. When you feel enough temperature, choose a small gear on the APP in a timely manner to keep warm.
2. If you don't want to use the APP, you can also switch it directly on the battery:
 - (1) Connect the battery to the power cord on the sock first.
 - (2) Press and hold the switch for 3 seconds, and the heating indicator light will all light up and flash simultaneously, indicating that the 1-minute rapid heating program has entered. After starting the heating program, you can also freely select the heating mode by pressing the switch.
 - (3) Press and hold the switch again for 3 seconds to shut down.
3. After your device is connected to the APP, when the phone is away from the device, the APP will display that the device is turned off, but the socks are still in a heated state. When the phone is close to the device, it will automatically connect to the APP.


- 01

02 -

AXE ENVIRONNEMENT HEATED SOCKS

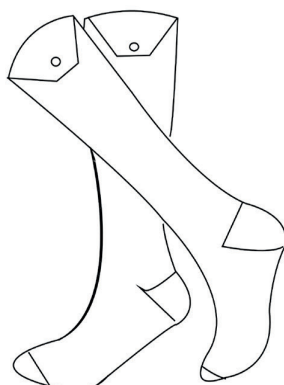

01 Battery Introduction

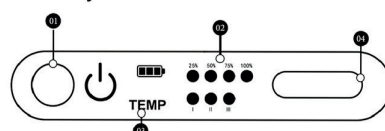

1. Power switch/mode selection.
2. Battery indicator light (it will flash intermittently, with one flash indicating 25% battery, two flashes indicating 50% battery, three flashes indicating 75% battery, and four flashes indicating 100% battery).
3. Heating indicator light, when fully lit, the maximum gear is heated, the one that is lit is the minimum gear is heated, and when fully lit and flashing at the same time, it is the fast heating mode.
4. TYPEC charging port.

02 Introduction of the APP interface



1. Switch symbols
2. Equipment status
3. Quick heating mode button
4. Temperature range adjustment
5. Timing button
6. More setting information

03 How to quickly use the devices?




Step 1:
Download the app. Search for 'WarmU' in the App store and download the 'WarmU' App.



Step 2:
Turn on the Bluetooth function of the phone.

Step 3: Connect the device .

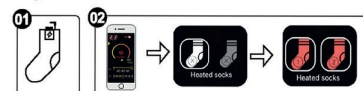

1. Firstly, connect the power cord to the battery.
2. Open the app, click on the power switch symbol, and the app will automatically match and connect with the device. When the following icon turns red, it indicates that the App has been connected to the device, the device has been turned on, and they are heating.



Step 4: Select your heating mode on the APP

(1) Automatic heating mode. After connecting the device to the APP, it automatically enters to the heating program. Then, the temperature rises to the desired value, adjust the gear down for insulation.



(2) Quick heating mode. Open the fast heating mode button in the upper right corner of the APP, the device will enter to fast heating for 1 minute, and then automatically enter insulation mode.

Precautions:

1. You don't need to use the maximum heating range all the time. When you feel enough temperature, choose a small gear on the APP in a timely manner to keep warm.
2. If you don't want to use the APP, you can also switch it directly on the battery:
 - (1) Connect the battery to the power cord on the sock first.
 - (2) Press and hold the switch for 3 seconds, and the heating indicator light will all light up and flash simultaneously, indicating that the 1-minute rapid heating program has entered. After starting the heating program, you can also freely select the heating mode by pressing the switch.
 - (3) Press and hold the switch again for 3 seconds to shut down.
3. After your device is connected to the APP, when the phone is away from the device, the APP will display that the device is turned off, but the socks are still in a heated state. When the phone is close to the device, it will automatically connect to the APP.

- 01

02 -



Precautions. 2

1. It is forbidden to approach high-temperature, flammable or explosive objects.
2. Do not fall by gravity, do not disassemble or reassemble.
3. If the battery is not used frequently, it is recommended to charge and activate it every 60 days.
4. It is recommended not to use high temperature for a long time to avoid skin discomfort.
5. Keep the battery in good condition. The battery shall be stored in a dry and cool environment.
6. Prevent low-temperature burns (if the human body is in a low temperature environment, the body feels dull, and there are differences in physical fitness. If there is a slight burning sensation, your temperature may have exceeded that of the skin. It is recommended to feel warm, not cold. Please lower the temperature in time when the body feels slightly burning.
7. It's forbidden to use during charging.

WASHING INSTRUCTIONS

1. The water temperature should not exceed 122°F
2. The battery must be removed before cleaning, and the battery connecting wire must be sorted and put back into the battery bag. (note that the battery cannot be washed with water)
3. Stockings must be machine washed after being put into the laundry bag. It is recommended to wash them by hand.
4. Turn the power cord out and dry it naturally. Do not use a high-temperature iron or dry it at high temperature for dehydration.

The symbol of the crossed-out waste bin on batteries or accumulators indicates that they must not be disposed of in household waste at the end of their life. If batteries or accumulators contain mercury (Hg), cadmium (Cd) or lead (Pb), you will find the respective chemical symbol below the symbol of the crossed out trash can. You are legally obliged to return old batteries and accumulators after use. You can do this free of charge at the retail store or at another collection point in your area. Addresses of suitable collection points can be obtained from your city or municipal administration.

Batteries can contain substances that are harmful to the environment and human health. Special caution should be exercised due to the special risks associated with lithium-containing batteries. Separate collection and recycling of old batteries and accumulators aims to avoid negative effects on the environment and human health.

Please avoid waste from old batteries as much as possible, e.g. by preferring batteries with longer life or rechargeable batteries. Please avoid littering the public space by not leaving batteries or battery-containing electrical and electronic equipment lying carelessly. Please consider ways to recycle a battery instead of disposal, for example by reconditioning or repairing the battery.

Information on electrical and electronic equipment.

— 03



The following notice is intended for private end-users using electrical and/or electronic equipment.

1 Separate collection of waste equipment

Electrical and electronic equipment that has become waste is referred to as waste equipment. Owners of old equipment must record them separately from unsorted municipal waste. In particular, old equipment does not belong in household waste, but in special collection and return systems.

2 Batteries and accumulators

Owners of waste equipment shall, as a rule, separate waste batteries and accumulators which are not enclosed by the waste equipment from it before being handed over to a collection point. This does not apply if the waste equipment is handed over to public waste management bodies and separated from other waste equipment there for the purpose of preparation for reuse.

3 Possibilities of returning old equipment

If you own old equipment, you can return or collect old equipment for the purpose of proper disposal of the old equipment to the facilities established and available by public waste management bodies. Where appropriate, it is also possible to hand over electrical and electronic equipment for the purpose of reusing the equipment. Further information can be obtained from the respective collection or collection centre. Return point.

4 Privacy Policy

Old equipment often contains sensitive personal data. This applies in particular to information and telecommunications technology devices such as computers and smartphones. In your own interest, please note that each end user is responsible for the deletion of data on the waste equipment to be disposed of.

5 Meaning of the symbol "crossed out trash can"

The symbol of a crossed-out bin, which is regularly depicted on the electrical and electronic equipment, indicates that at the end of its life the respective device must be recorded separately from unsorted municipal waste.

04 —



Guide d'entretien

Débranchez et retirez la source d'alimentation avant d'effectuer l'entretien. Ne pas tordre le vêtement pour éviter des dommages au câble.

LAVER SÉPARÉMENT À LA MACHINE À L'EAU FROIDE
- CYCLE DÉLICAT - NE PAS UTILISER D'AGENT DE BLANCHIMENT
- SÉCHER À LA MACHINE À BASSE
TEMPÉRATURE CYCLE DÉLICAT - REPASSER À BASSE
TEMPÉRATURE - NE PAS NETTOYER À SEC.



Guide d'entreposage

Rangez l'article dans un endroit frais et sec. Des températures extrêmes durant l'entreposage pourraient écourter la durée de vie de la source d'alimentation. Gardez tous les connecteurs et contacts propres et secs.

Information sur la garantie :

Axe-environnement pour une garantie limitée
Deux (2)ans incluant la source d'alimentation, les modules chauffants et le vest/manteau à partir de la date d'achat initiale d'un détaillant

Instructions de mise au rebut de la source d'alimentation.
•Veuillez jeter les sources d'alimentation conformément aux réglementations

de votre municipalité.



•Protégez notre environnement.

Prendre Contact.

si vous rencontrez des problèmes avec le produit pendant la période de garantie, veuillez nous contacter par e-mail: savclient@axe-environnement.eu

05 —



Precautions. 2

1. It is forbidden to approach high-temperature, flammable or explosive objects.
2. Do not fall by gravity, do not disassemble or reassemble.
3. If the battery is not used frequently, it is recommended to charge and activate it every 60 days.
4. It is recommended not to use high temperature for a long time to avoid skin discomfort.
5. Keep the battery in good condition. The battery shall be stored in a dry and cool environment.
6. Prevent low-temperature burns (if the human body is in a low temperature environment, the body feels dull, and there are differences in physical fitness. If there is a slight burning sensation, your temperature may have exceeded that of the skin. It is recommended to feel warm, not cold. Please lower the temperature in time when the body feels slightly burning.
7. It's forbidden to use during charging.

WASHING INSTRUCTIONS

1. The water temperature should not exceed 122°F
2. The battery must be removed before cleaning, and the battery connecting wire must be sorted and put back into the battery bag. (note that the battery cannot be washed with water)
3. Stockings must be machine washed after being put into the laundry bag. It is recommended to wash them by hand.
4. Turn the power cord out and dry it naturally. Do not use a high-temperature iron or dry it at high temperature for dehydration.

The symbol of the crossed-out waste bin on batteries or accumulators indicates that they must not be disposed of in household waste at the end of their life. If batteries or accumulators contain mercury (Hg), cadmium (Cd) or lead (Pb), you will find the respective chemical symbol below the symbol of the crossed out trash can. You are legally obliged to return old batteries and accumulators after use. You can do this free of charge at the retail store or at another collection point in your area. Addresses of suitable collection points can be obtained from your city or municipal administration.

Batteries can contain substances that are harmful to the environment and human health. Special caution should be exercised due to the special risks associated with lithium-containing batteries. Separate collection and recycling of old batteries and accumulators aims to avoid negative effects on the environment and human health.

Please avoid waste from old batteries as much as possible, e.g. by preferring batteries with longer life or rechargeable batteries. Please avoid littering the public space by not leaving batteries or battery-containing electrical and electronic equipment lying carelessly. Please consider ways to recycle a battery instead of disposal, for example by reconditioning or repairing the battery.

Information on electrical and electronic equipment.

— 03



The following notice is intended for private end-users using electrical and/or electronic equipment.

1 Separate collection of waste equipment

Electrical and electronic equipment that has become waste is referred to as waste equipment. Owners of old equipment must record them separately from unsorted municipal waste. In particular, old equipment does not belong in household waste, but in special collection and return systems.

2 Batteries and accumulators

Owners of waste equipment shall, as a rule, separate waste batteries and accumulators which are not enclosed by the waste equipment from it before being handed over to a collection point. This does not apply if the waste equipment is handed over to public waste management bodies and separated from other waste equipment there for the purpose of preparation for reuse.

3 Possibilities of returning old equipment

If you own old equipment, you can return or collect old equipment for the purpose of proper disposal of the old equipment to the facilities established and available by public waste management bodies. Where appropriate, it is also possible to hand over electrical and electronic equipment for the purpose of reusing the equipment. Further information can be obtained from the respective collection or collection centre. Return point.

4 Privacy Policy

Old equipment often contains sensitive personal data. This applies in particular to information and telecommunications technology devices such as computers and smartphones. In your own interest, please note that each end user is responsible for the deletion of data on the waste equipment to be disposed of.

5 Meaning of the symbol "crossed out trash can"

The symbol of a crossed-out bin, which is regularly depicted on the electrical and electronic equipment, indicates that at the end of its life the respective device must be recorded separately from unsorted municipal waste.

04 —



Guide d'entretien

Débranchez et retirez la source d'alimentation avant d'effectuer l'entretien. Ne pas tordre le vêtement pour éviter des dommages au câble.

LAVER SÉPARÉMENT À LA MACHINE À L'EAU FROIDE
- CYCLE DÉLICAT - NE PAS UTILISER D'AGENT DE BLANCHIMENT
- SÉCHER À LA MACHINE À BASSE
TEMPÉRATURE CYCLE DÉLICAT - REPASSER À BASSE
TEMPÉRATURE - NE PAS NETTOYER À SEC.



Guide d'entreposage

Rangez l'article dans un endroit frais et sec. Des températures extrêmes durant l'entreposage pourraient écourter la durée de vie de la source d'alimentation. Gardez tous les connecteurs et contacts propres et secs.

Information sur la garantie :

Axe-environnement pour une garantie limitée
Deux (2)ans incluant la source d'alimentation, les modules chauffants et le vest/manteau à partir de la date d'achat initiale d'un détaillant

Instructions de mise au rebut de la source d'alimentation.
•Veuillez jeter les sources d'alimentation conformément aux réglementations

de votre municipalité.



•Protégez notre environnement.

Prendre Contact.

si vous rencontrez des problèmes avec le produit pendant la période de garantie, veuillez nous contacter par e-mail: savclient@axe-environnement.eu

05 —